 
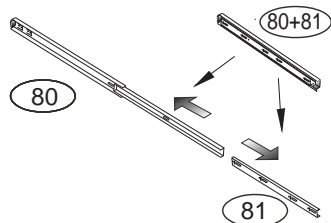 



VARIO





K 860-BC

1400x773x707

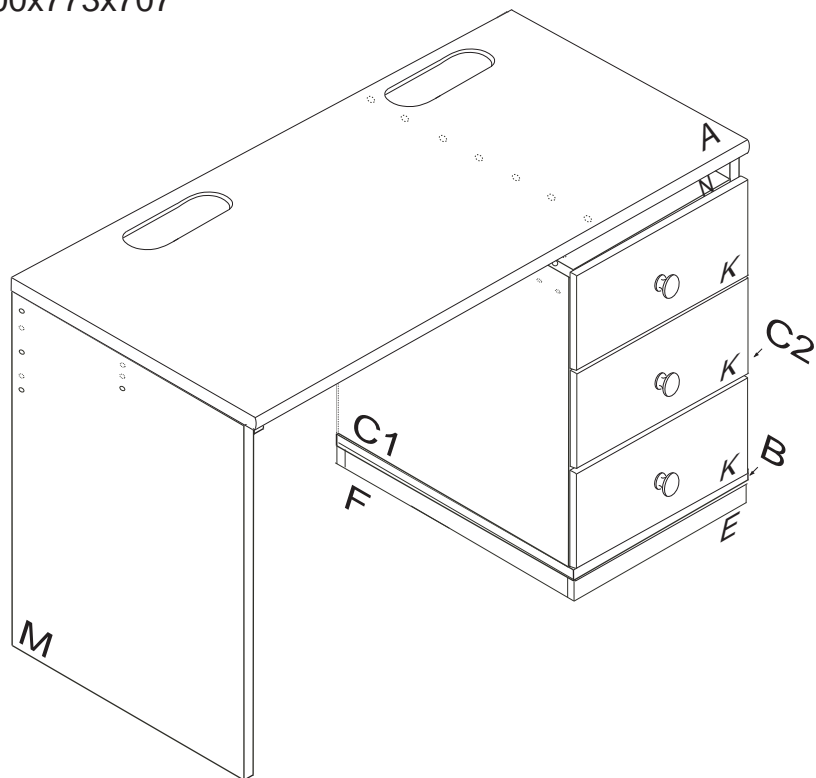






	3 x1 	4 x1 	6 x68 	22 x6 	23 x18 	29 x12
28 x3 	43 x18 	60 x28 	61 x28 	67 x16 	68 x18 	69 x18
70 x12 	71 x21 	80+81 x3 	92 x50 	102 x3 	103 x2 	

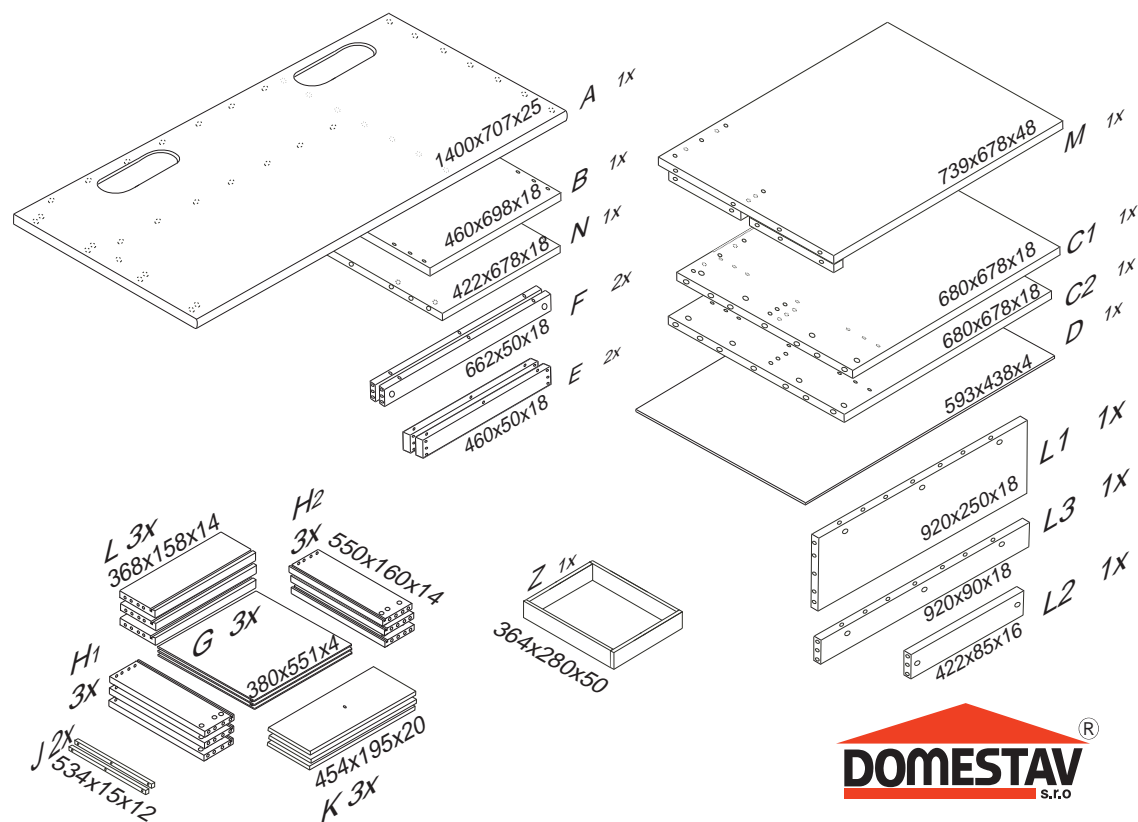 

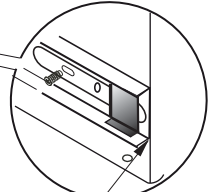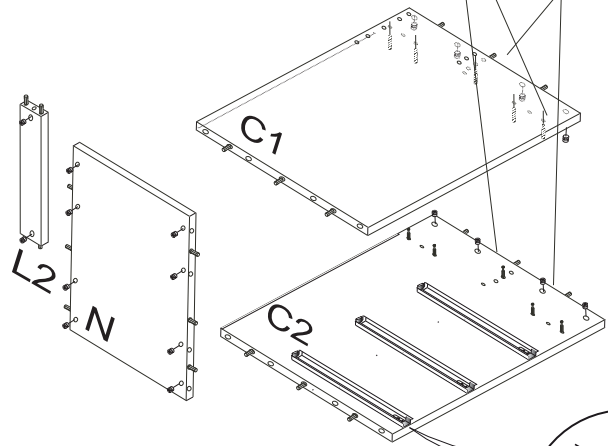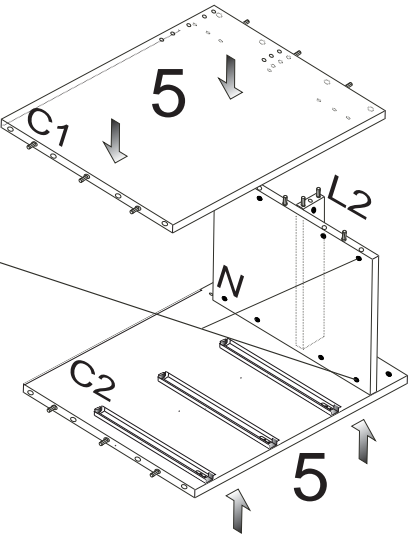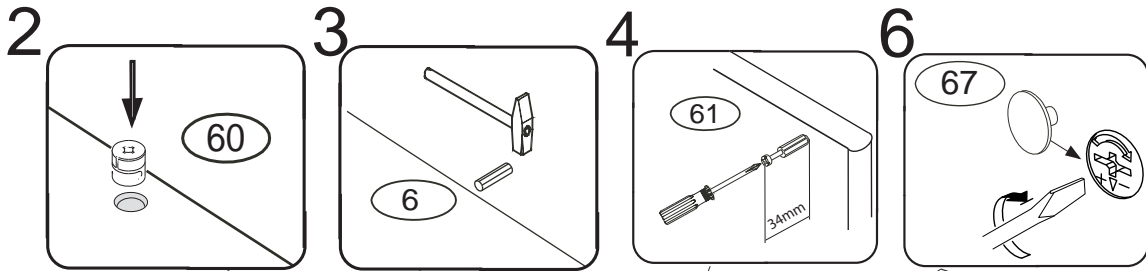    


Pro snazší otevírání zásuvek vyjměte gumový doraz pojezdu.

     
Přední hrana výsuvu musí být zároveň s přední hranou C2

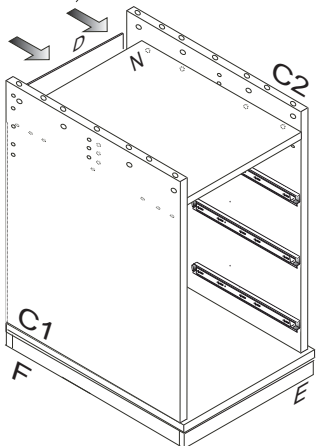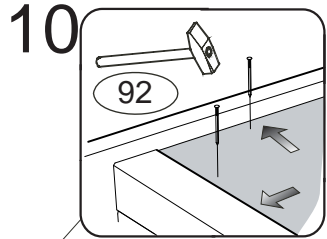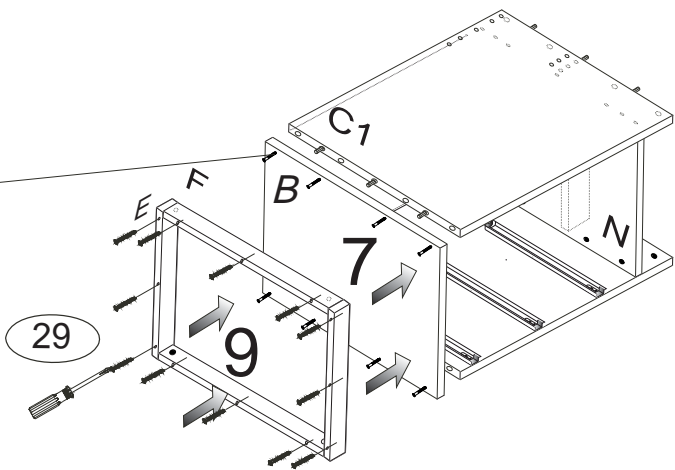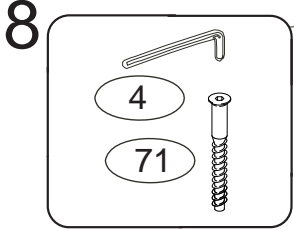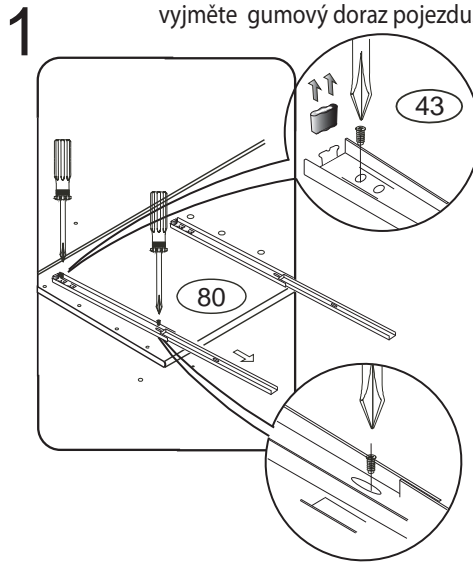


11

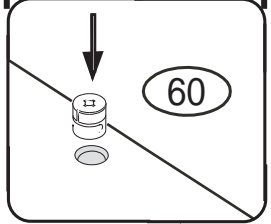 


12

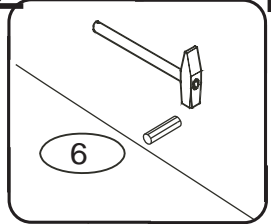 



13

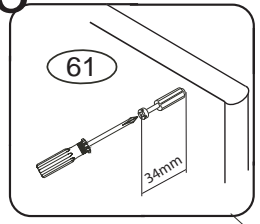 


15

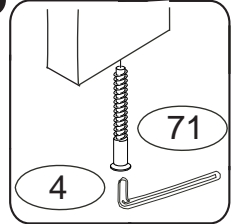 


14

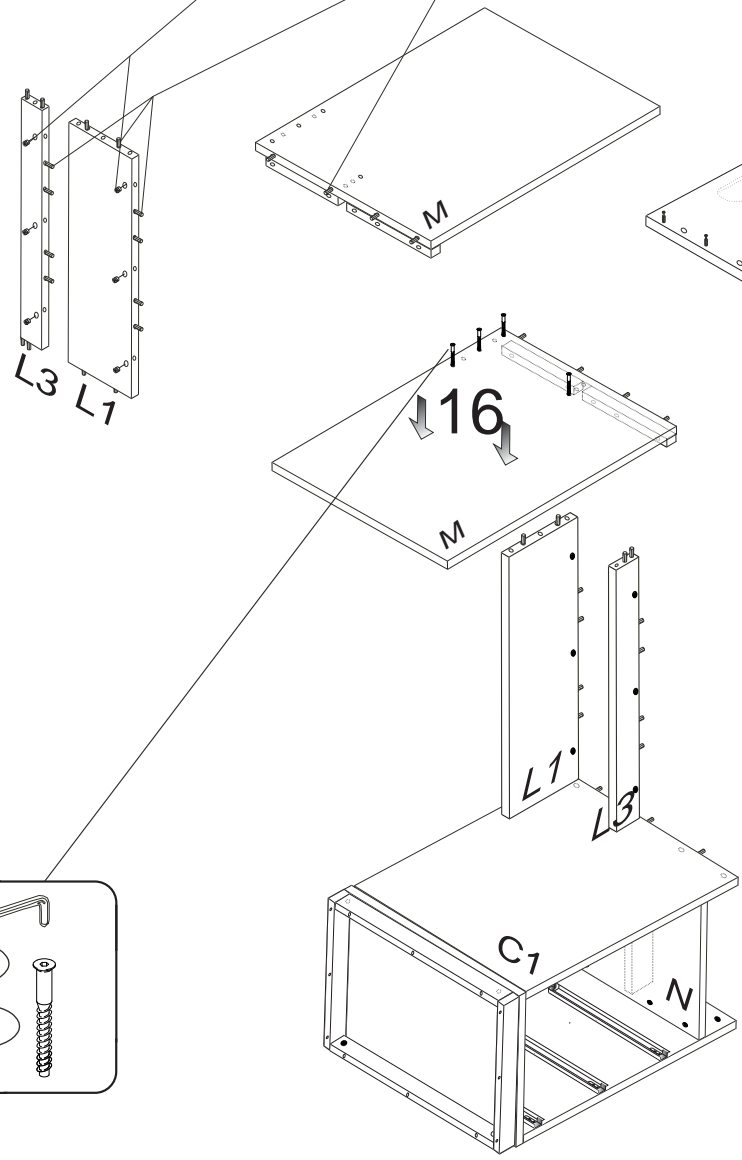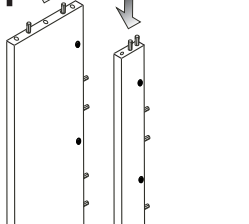  


17

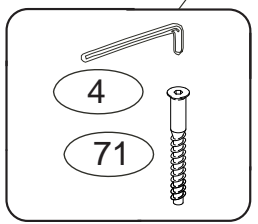 


16

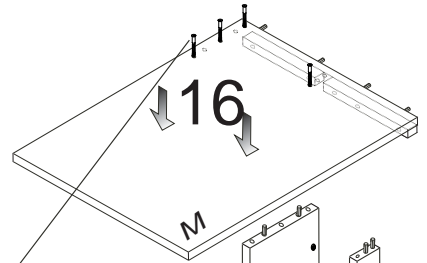 


18

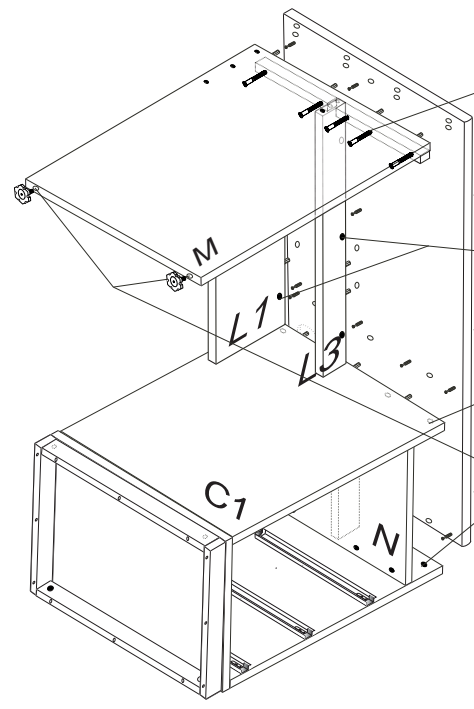 

19

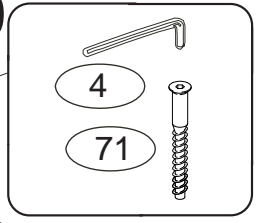 

20

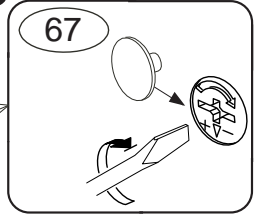 

21

