






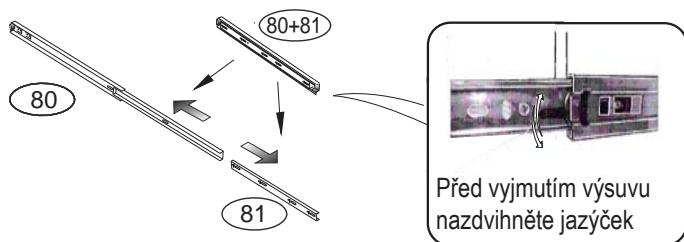

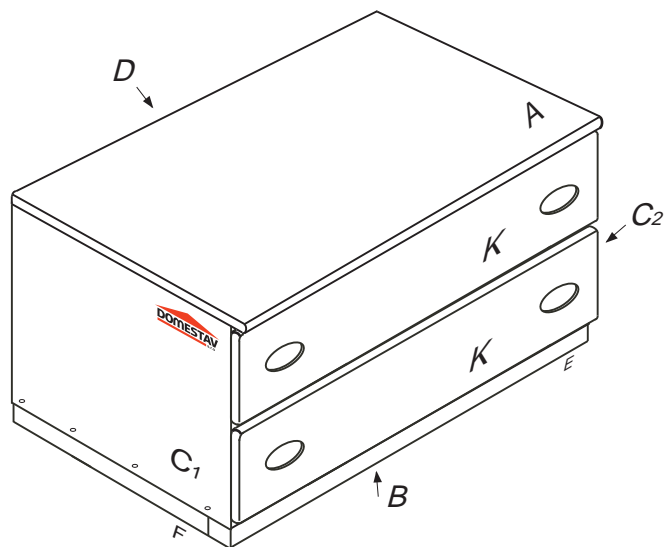

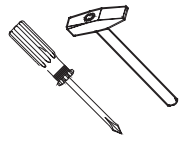








DOMINO

D 502

660x576x360




	3 x1  3mm	4 x1  4mm	6 x10  8x35mm	22 x12  3,5x16mm	23 x12  3,5x12mm	29 x8  4x40mm	
60 x8  15mm	61 x16  DU 2	68 x8  12mm	71 x8  7x50mm	73 x8  5x40mm	80+81 x2  500mm	87 x8 	92 x40  1,4x20mm

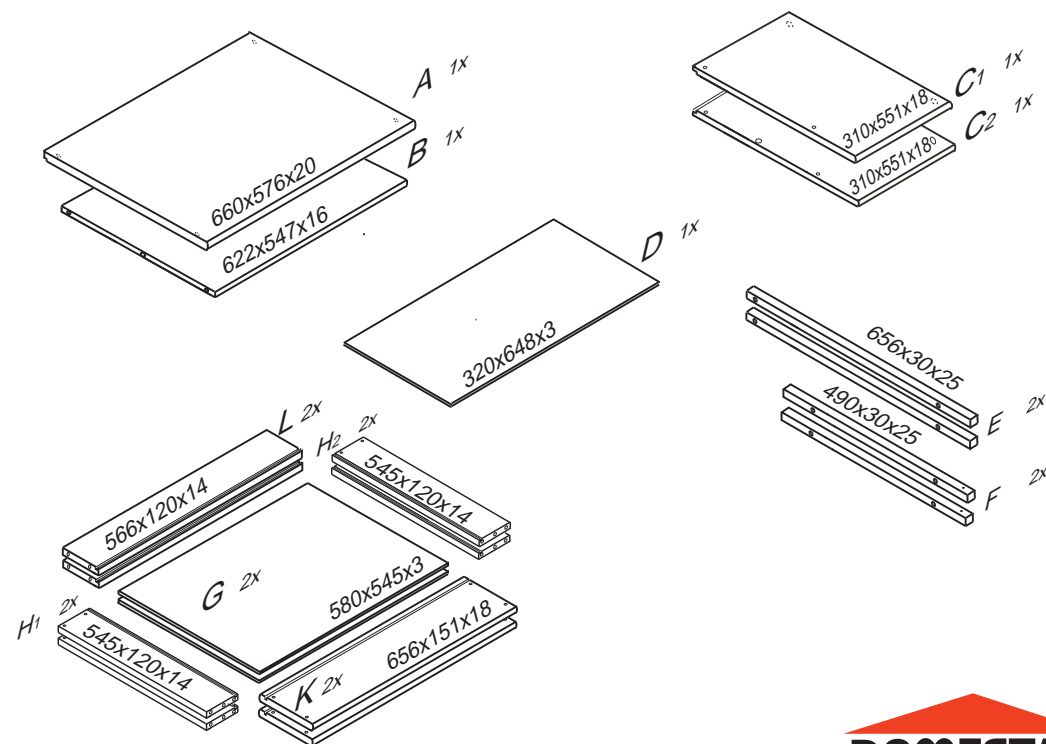


D 502


1

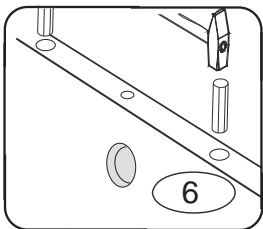

2

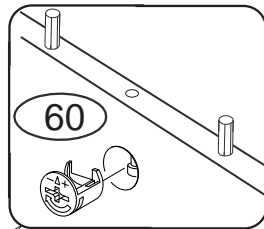


3

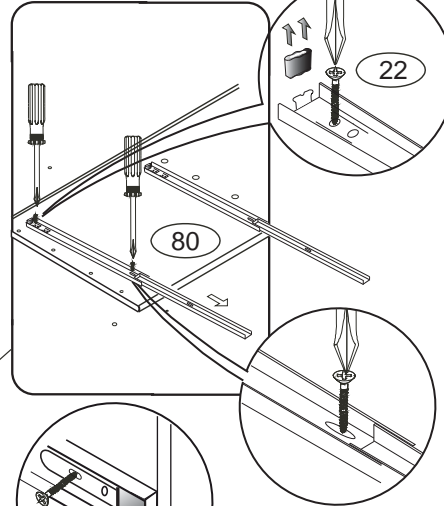

Pro snazší otevírání zásuvek
vyjměte gumový doraz pojezdu.



Přední hrana výsuvu
musí být zároveň
s přední hranou C2

4

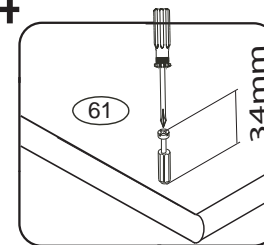


2/3

5

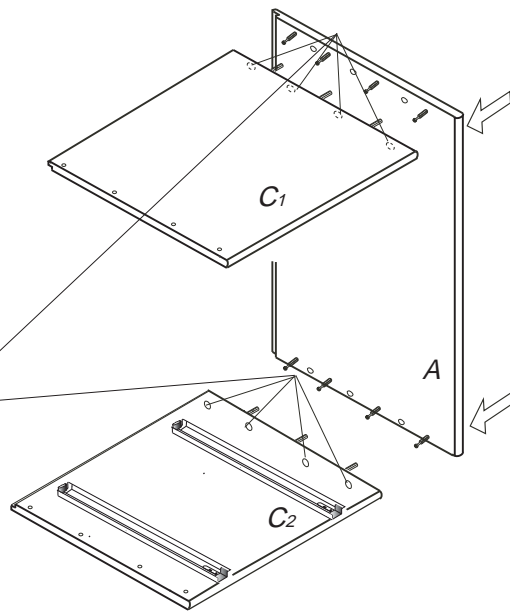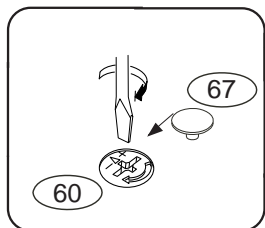

7

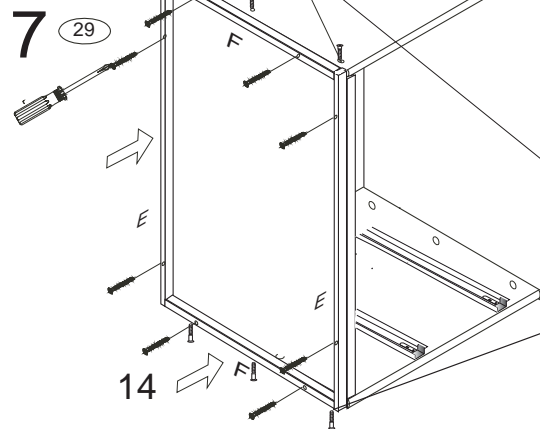

6

