
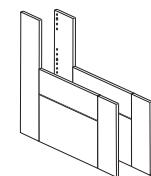



MERIDA

972x2054x948


č. 115/BC, č. 116/BC, č. 117/BC

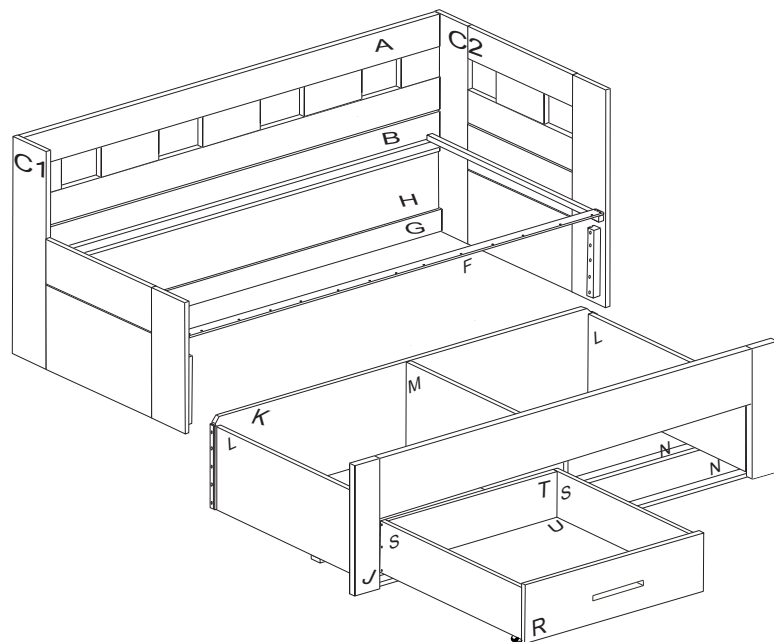

č. 115/BC

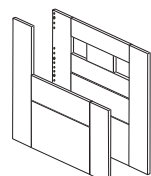


č. 116/BC





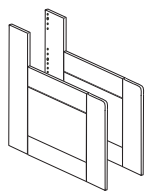


č. 117/BC

	1 x1	3 x1	4 x1	5 x1	6 x36	9 x22
		č.3	č.4	č.5	8x35mm	10x50mm
22 x24	23 x32	28 x10	29 x41	45 x8	46 x8	47 x8
3x16mm	3,5x16mm	4x30mm	4x40mm	M6x85mm	M6	ø6mm
50 x6	51 x1	52 x6	53 x1			60 x14
6x40mm	6x90mm	12600	13520			15mm
70 x14	71 x33		87 x8	80+81 x4	96 x12	97 x4
5x40mm	7x50mm		ø35mm	700mm	24mm	37mm

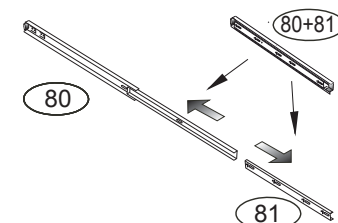


Před vyjmutím výsuvu
nazdvihněte jazýček



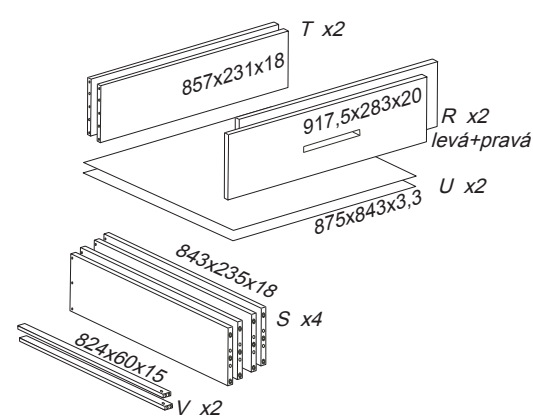
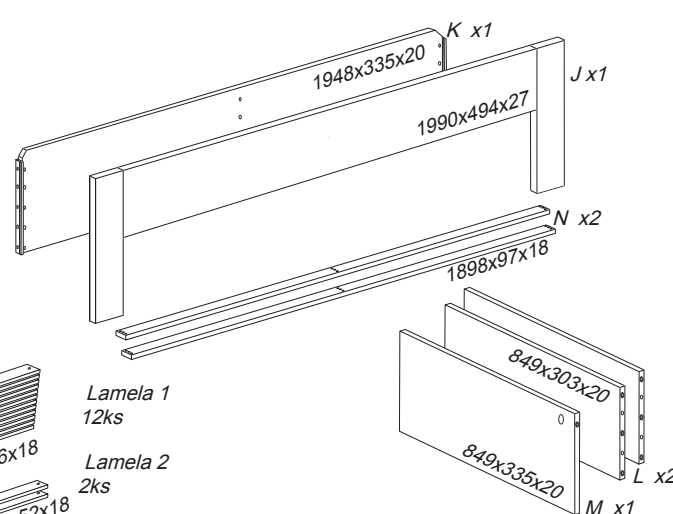
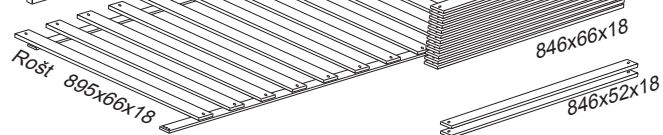
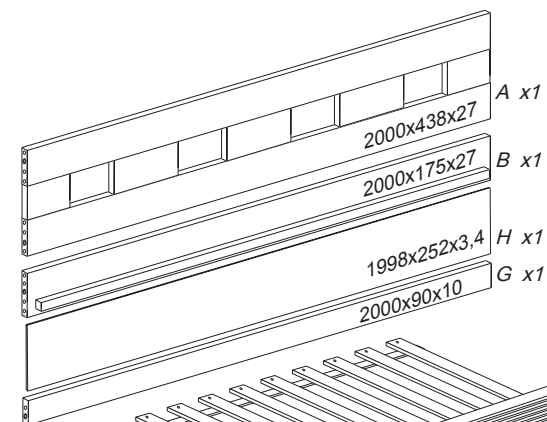
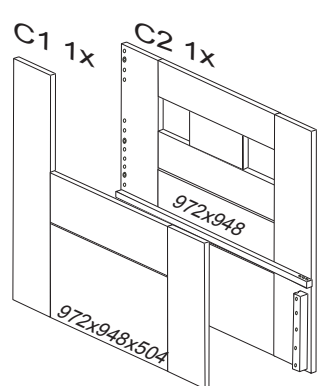


DOMESTAV
s.r.o.


1/5

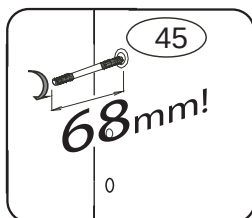


pro snazší zašroubování
namažte šroub mýdlem
nebo olejem

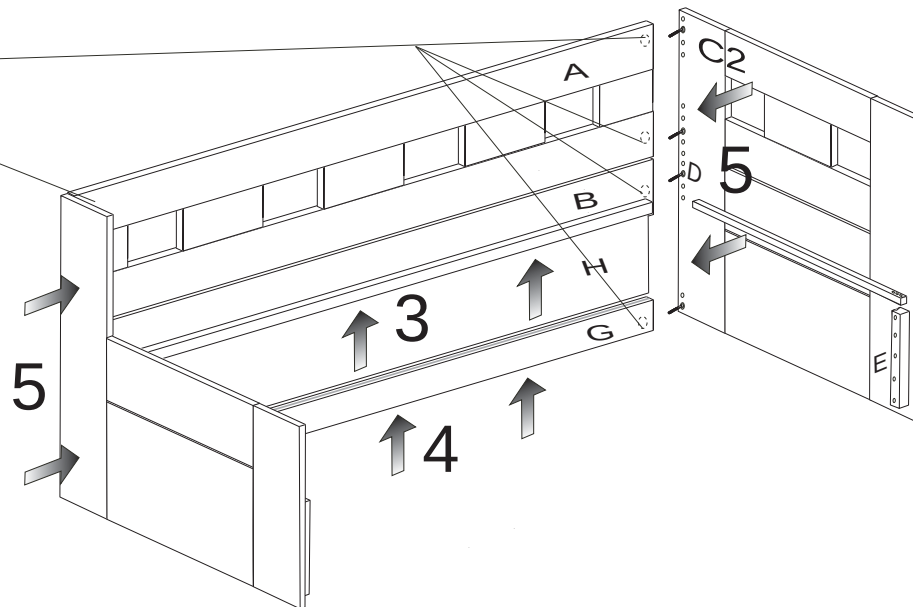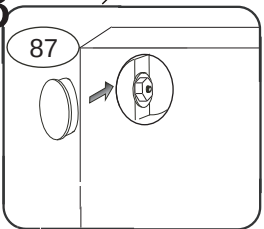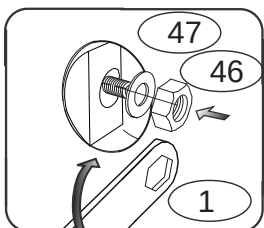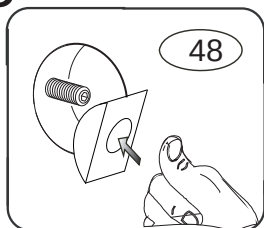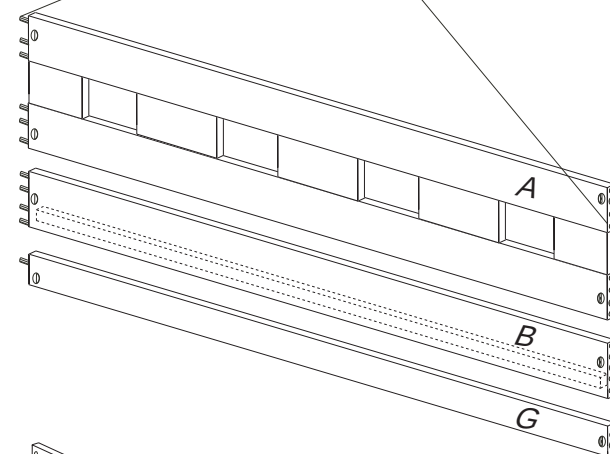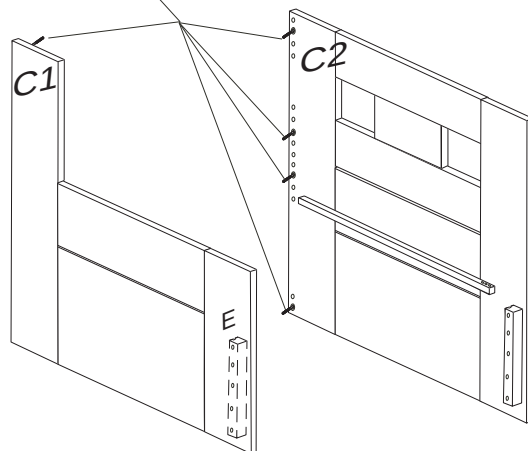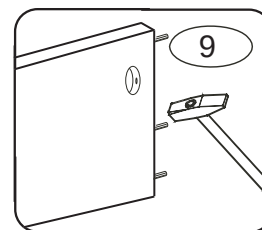


Kolíky vždy narazte nejprve do otvorů
ve hranách dílců, je nutné je zarazit se
stejným přesahem. V případě, že některý
kolík přesahuje, je nutné jej zakrátit.
Dílce srážejte kladivem pouze
přes dřevěnou podložku.

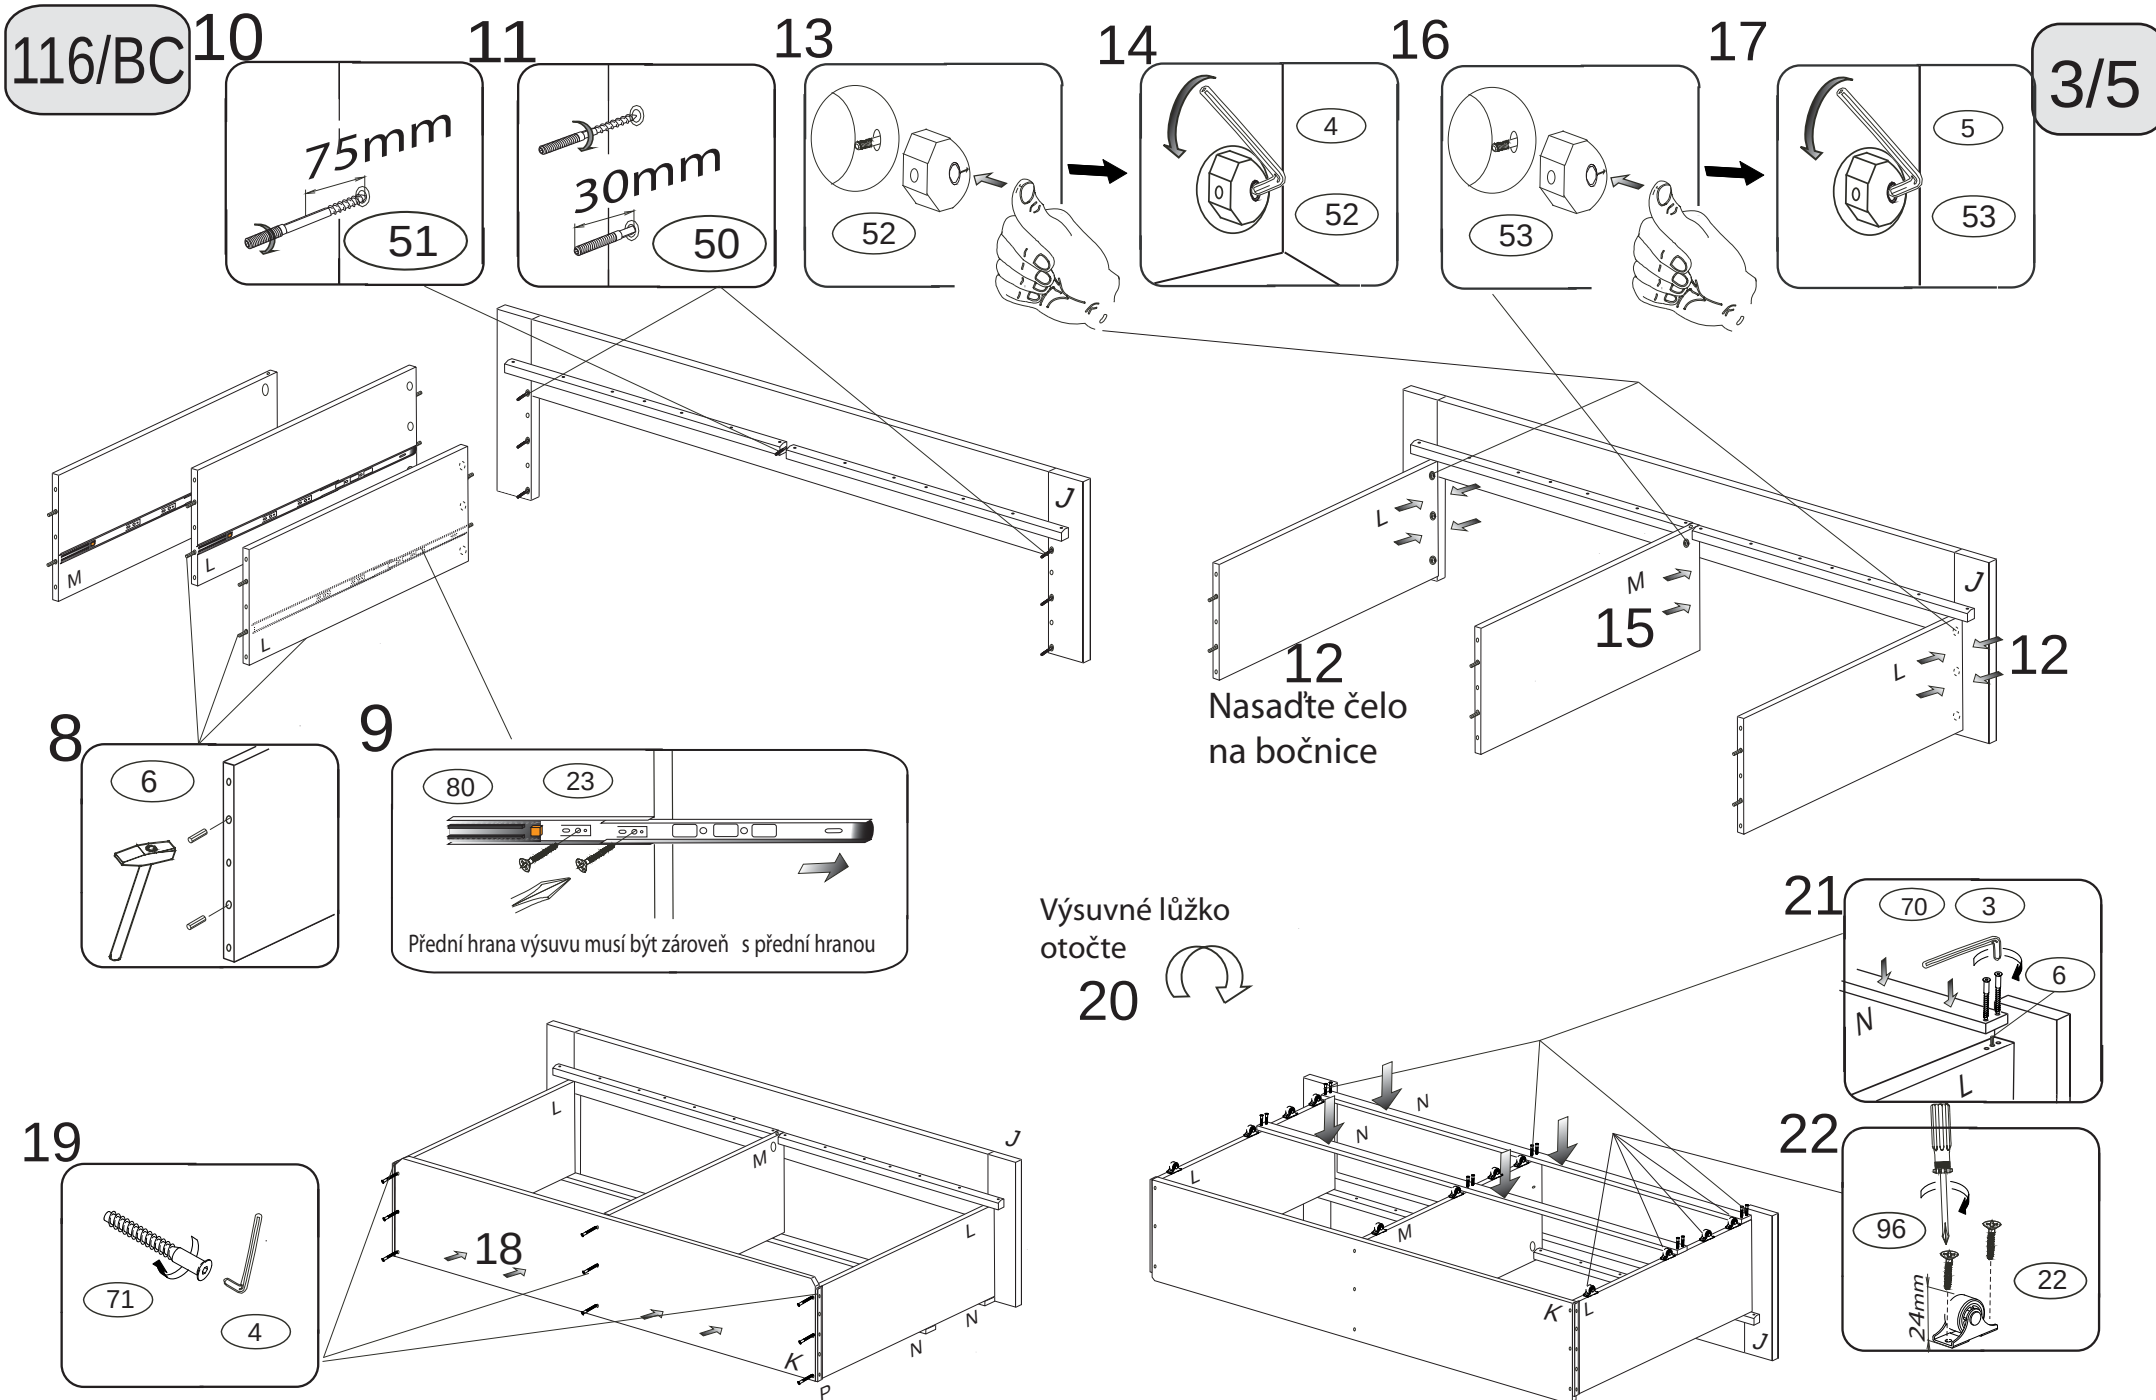


23

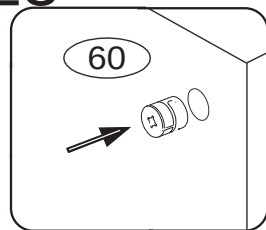


24

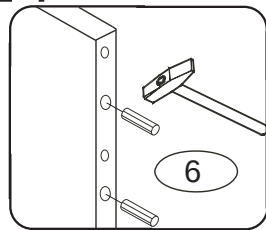



25

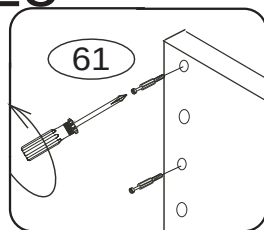


26

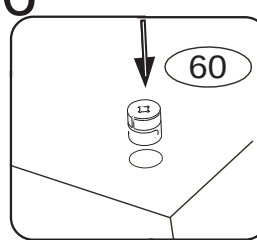


27

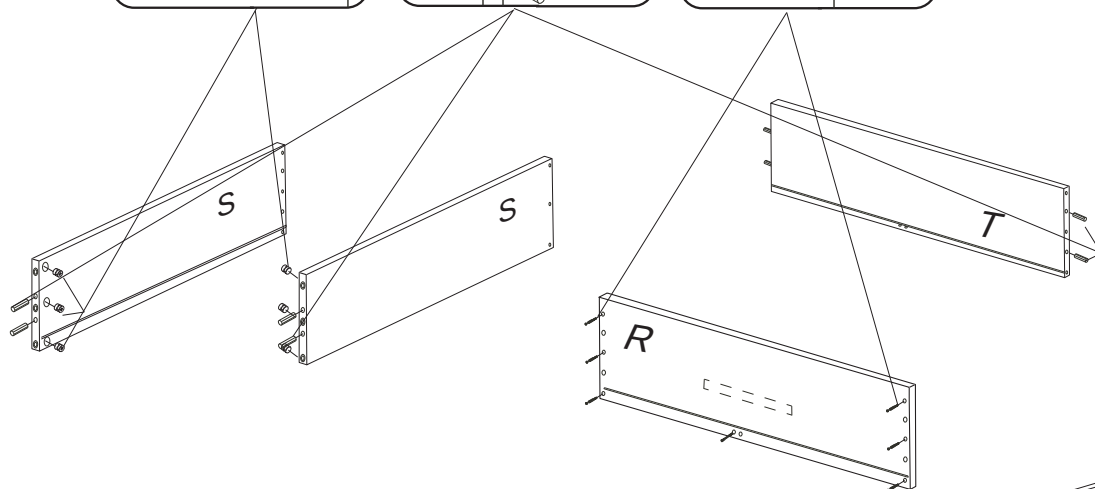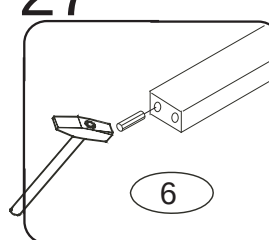


34

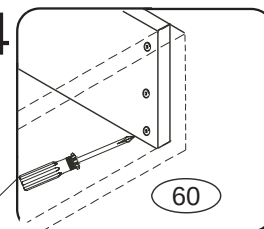


35

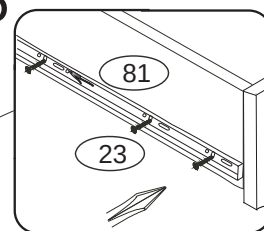


29

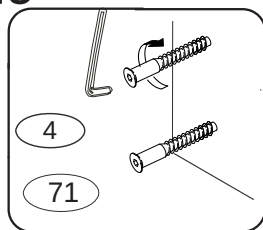



31

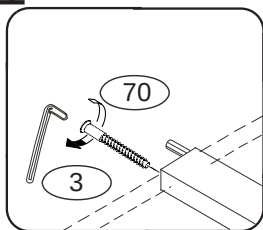


28

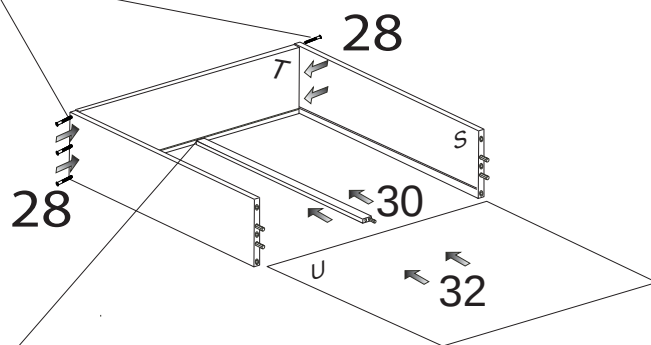


36

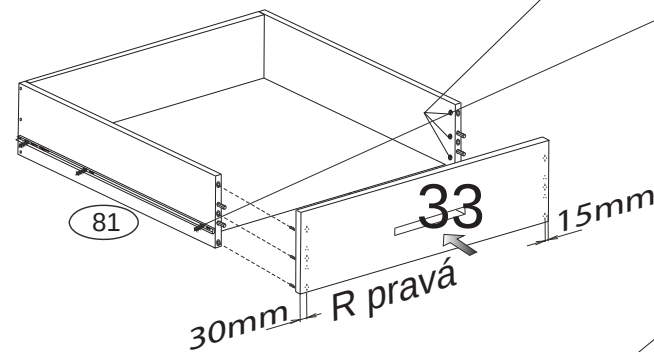



37

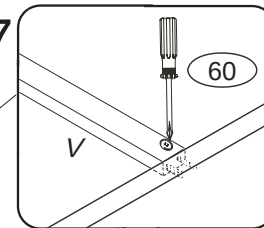








38

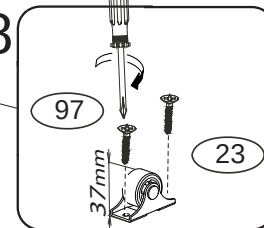

Obdobně smontujte
zásuvku levou

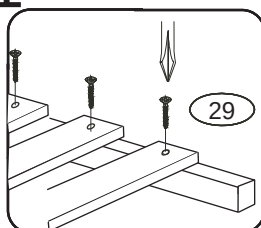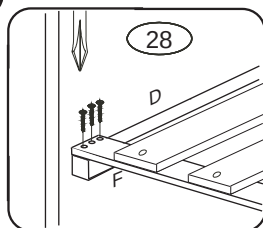

Přivřete výsuvné
lůžko.
Mezi rošt rozložte
lamely 1 12ks
a lamely 2 2ks.

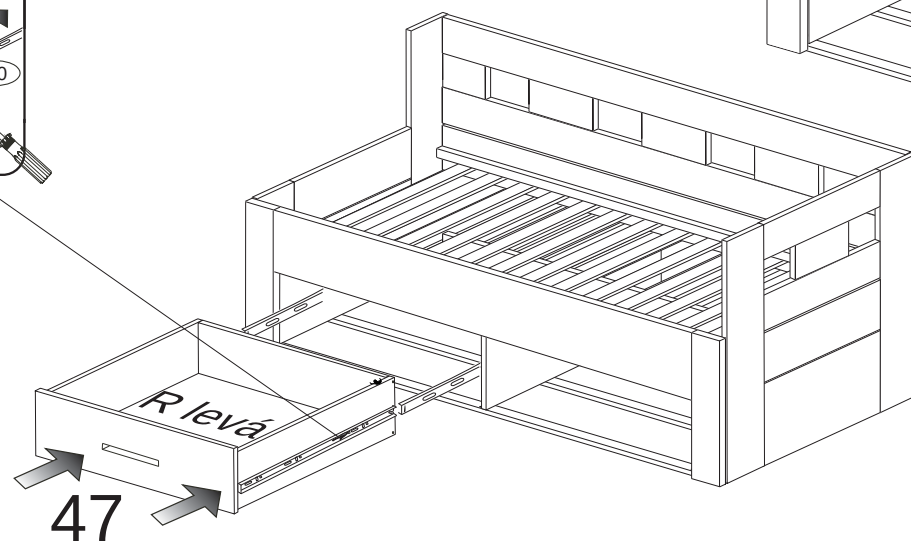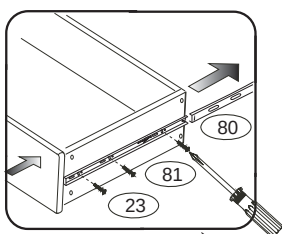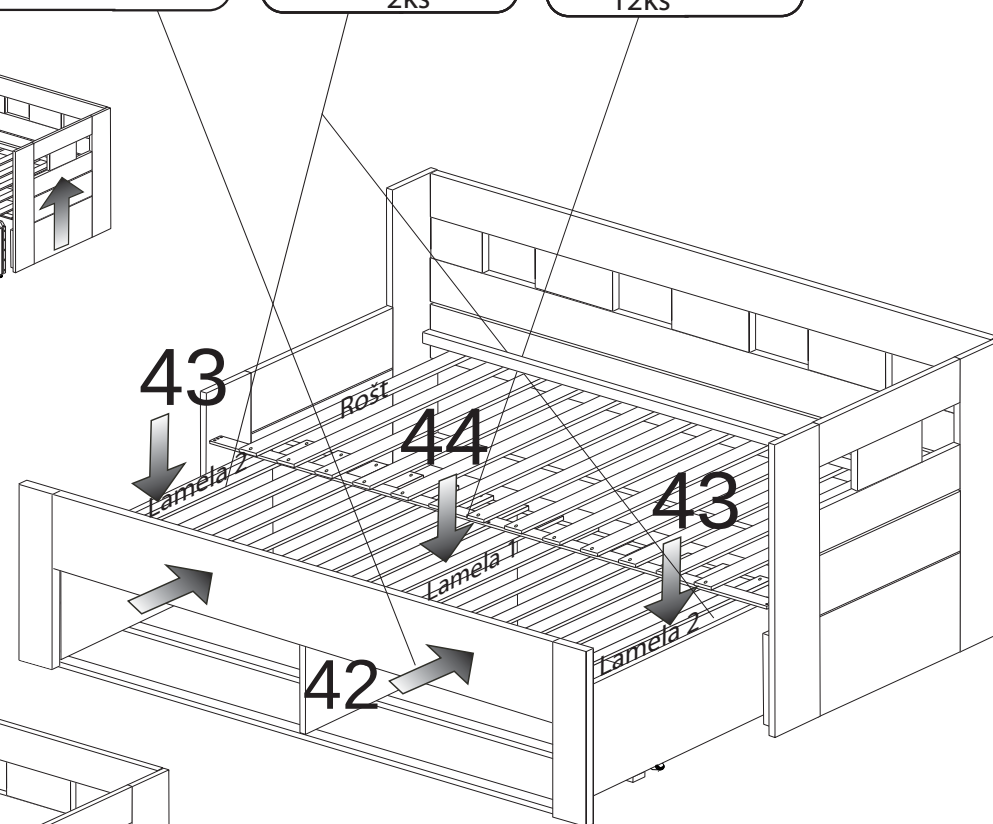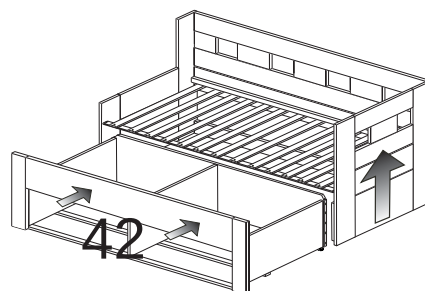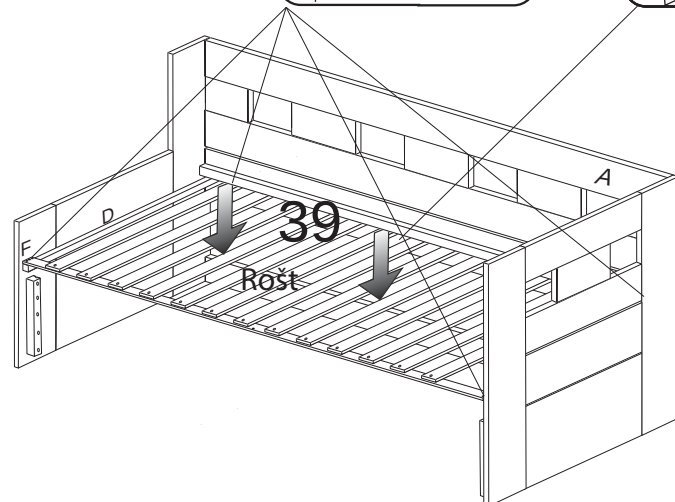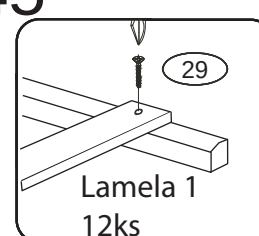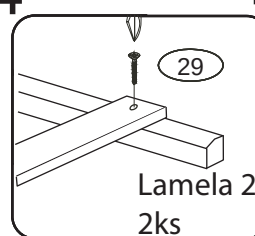

V případě vrzání vtláče do spoje tekuté mýdlo
v poměru 1:1 s vodou. Tento jev se u nábytku
z masivu vyskytuje běžně.