
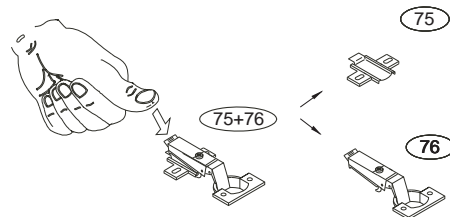


# DOMINO


## D 512













970x576x1560

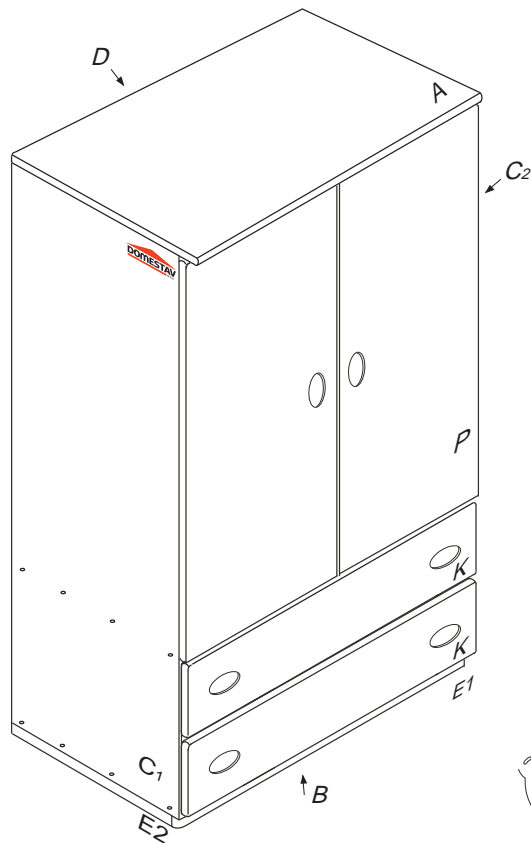


Kolíky vždy narazte nejprve do otvorů ve hranách dílců, je nutné je zarazit se stejným přesahem. V případě, že některý kolík přesahuje, je nutné jej zakrátit. Dílce srážejte kladivem pouze přes dřevěnou podložku.


	3 x1 3mm	4 x1 4mm	6 x14 8x35mm	11 x8 6x35mm	21 x12 3x20mm	22 x12 3,5x16mm	
29 x10 4x40mm	33 x4 3x12mm	43 x8 EU 6x16mm	60 x8 15mm	61 x20 DU 2	67 x8 12mm	71 x16 7x50mm	
73 x12 5x40mm	75	76 x4	80 x2 500mm	87 x16	88 x2	89 x2	92 x60 1,4x20mm

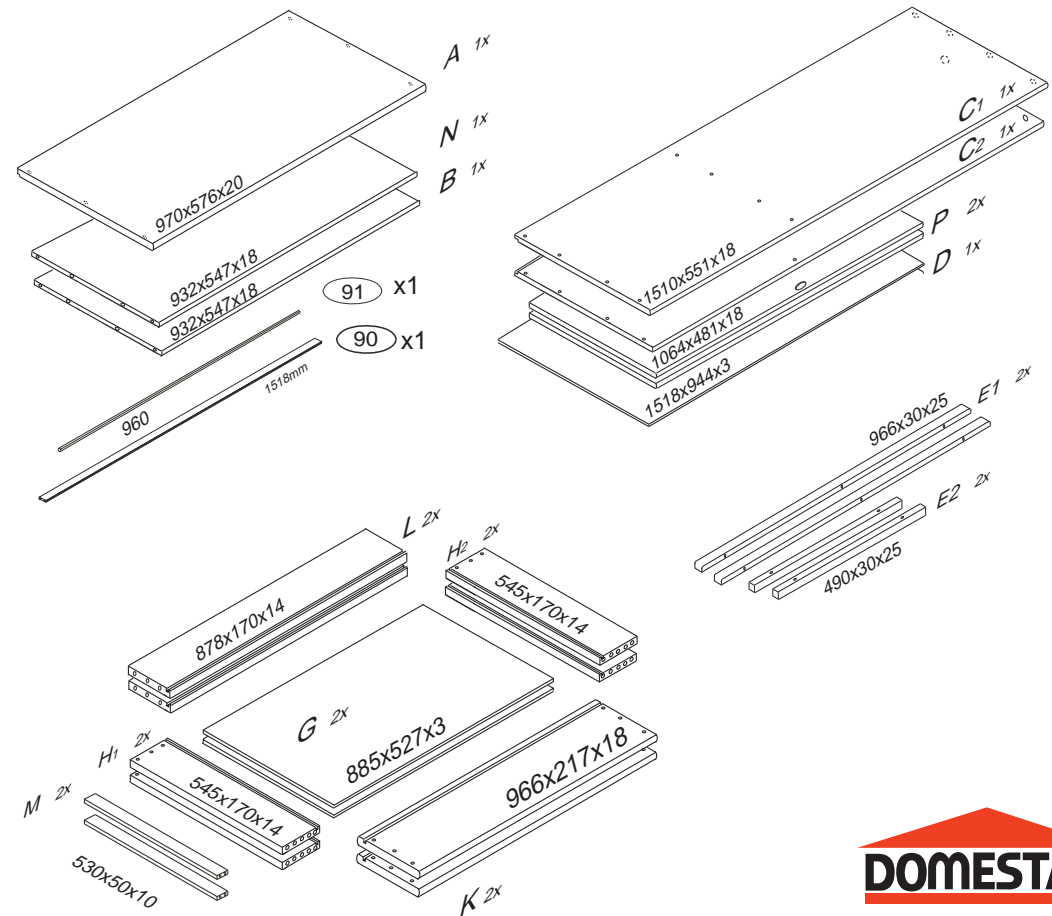

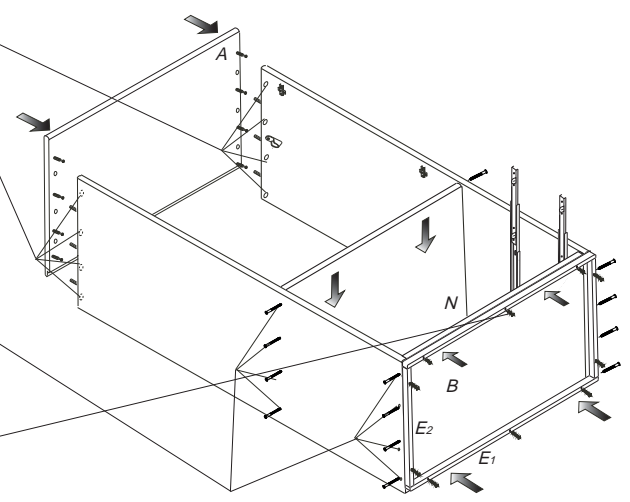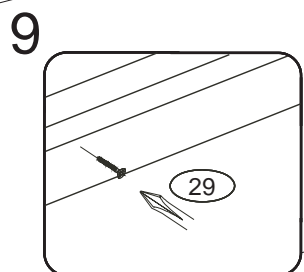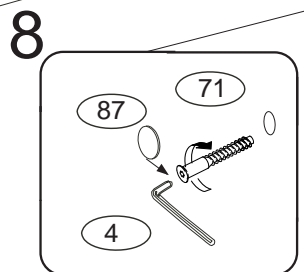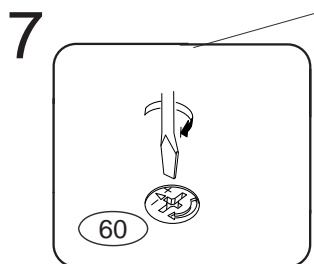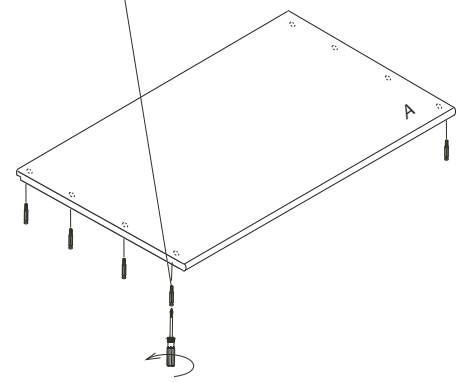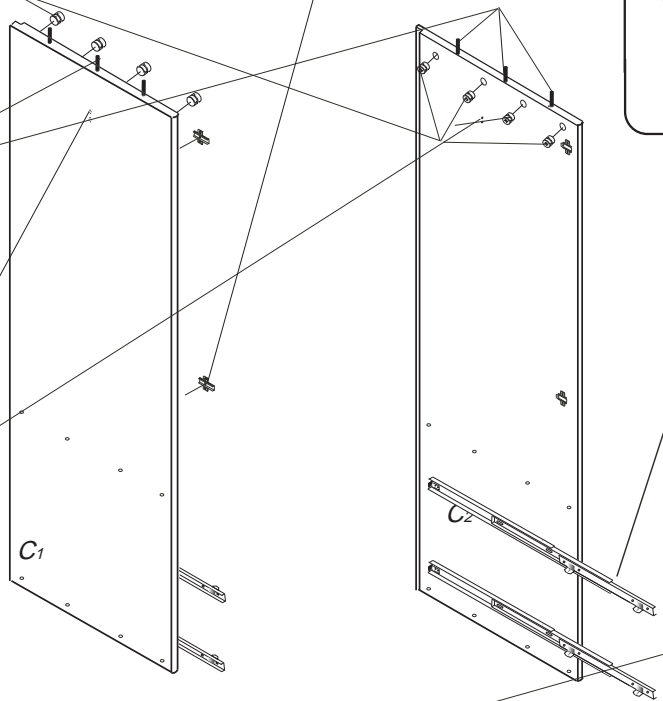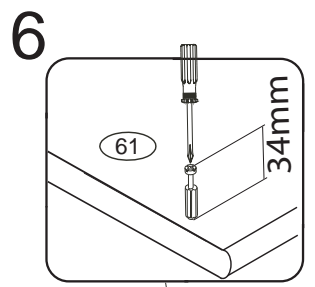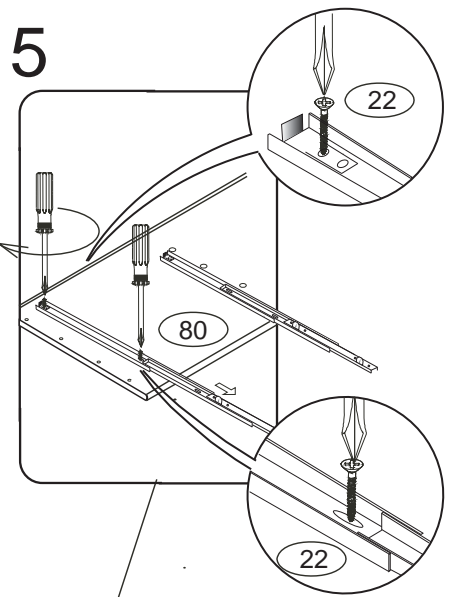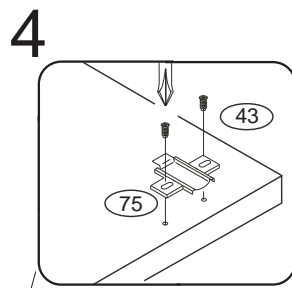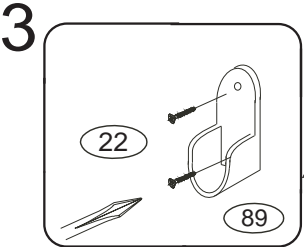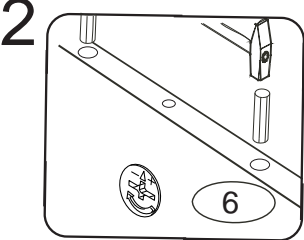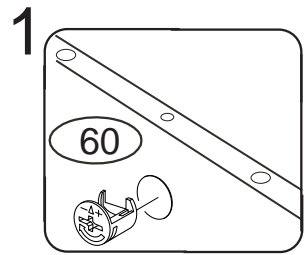


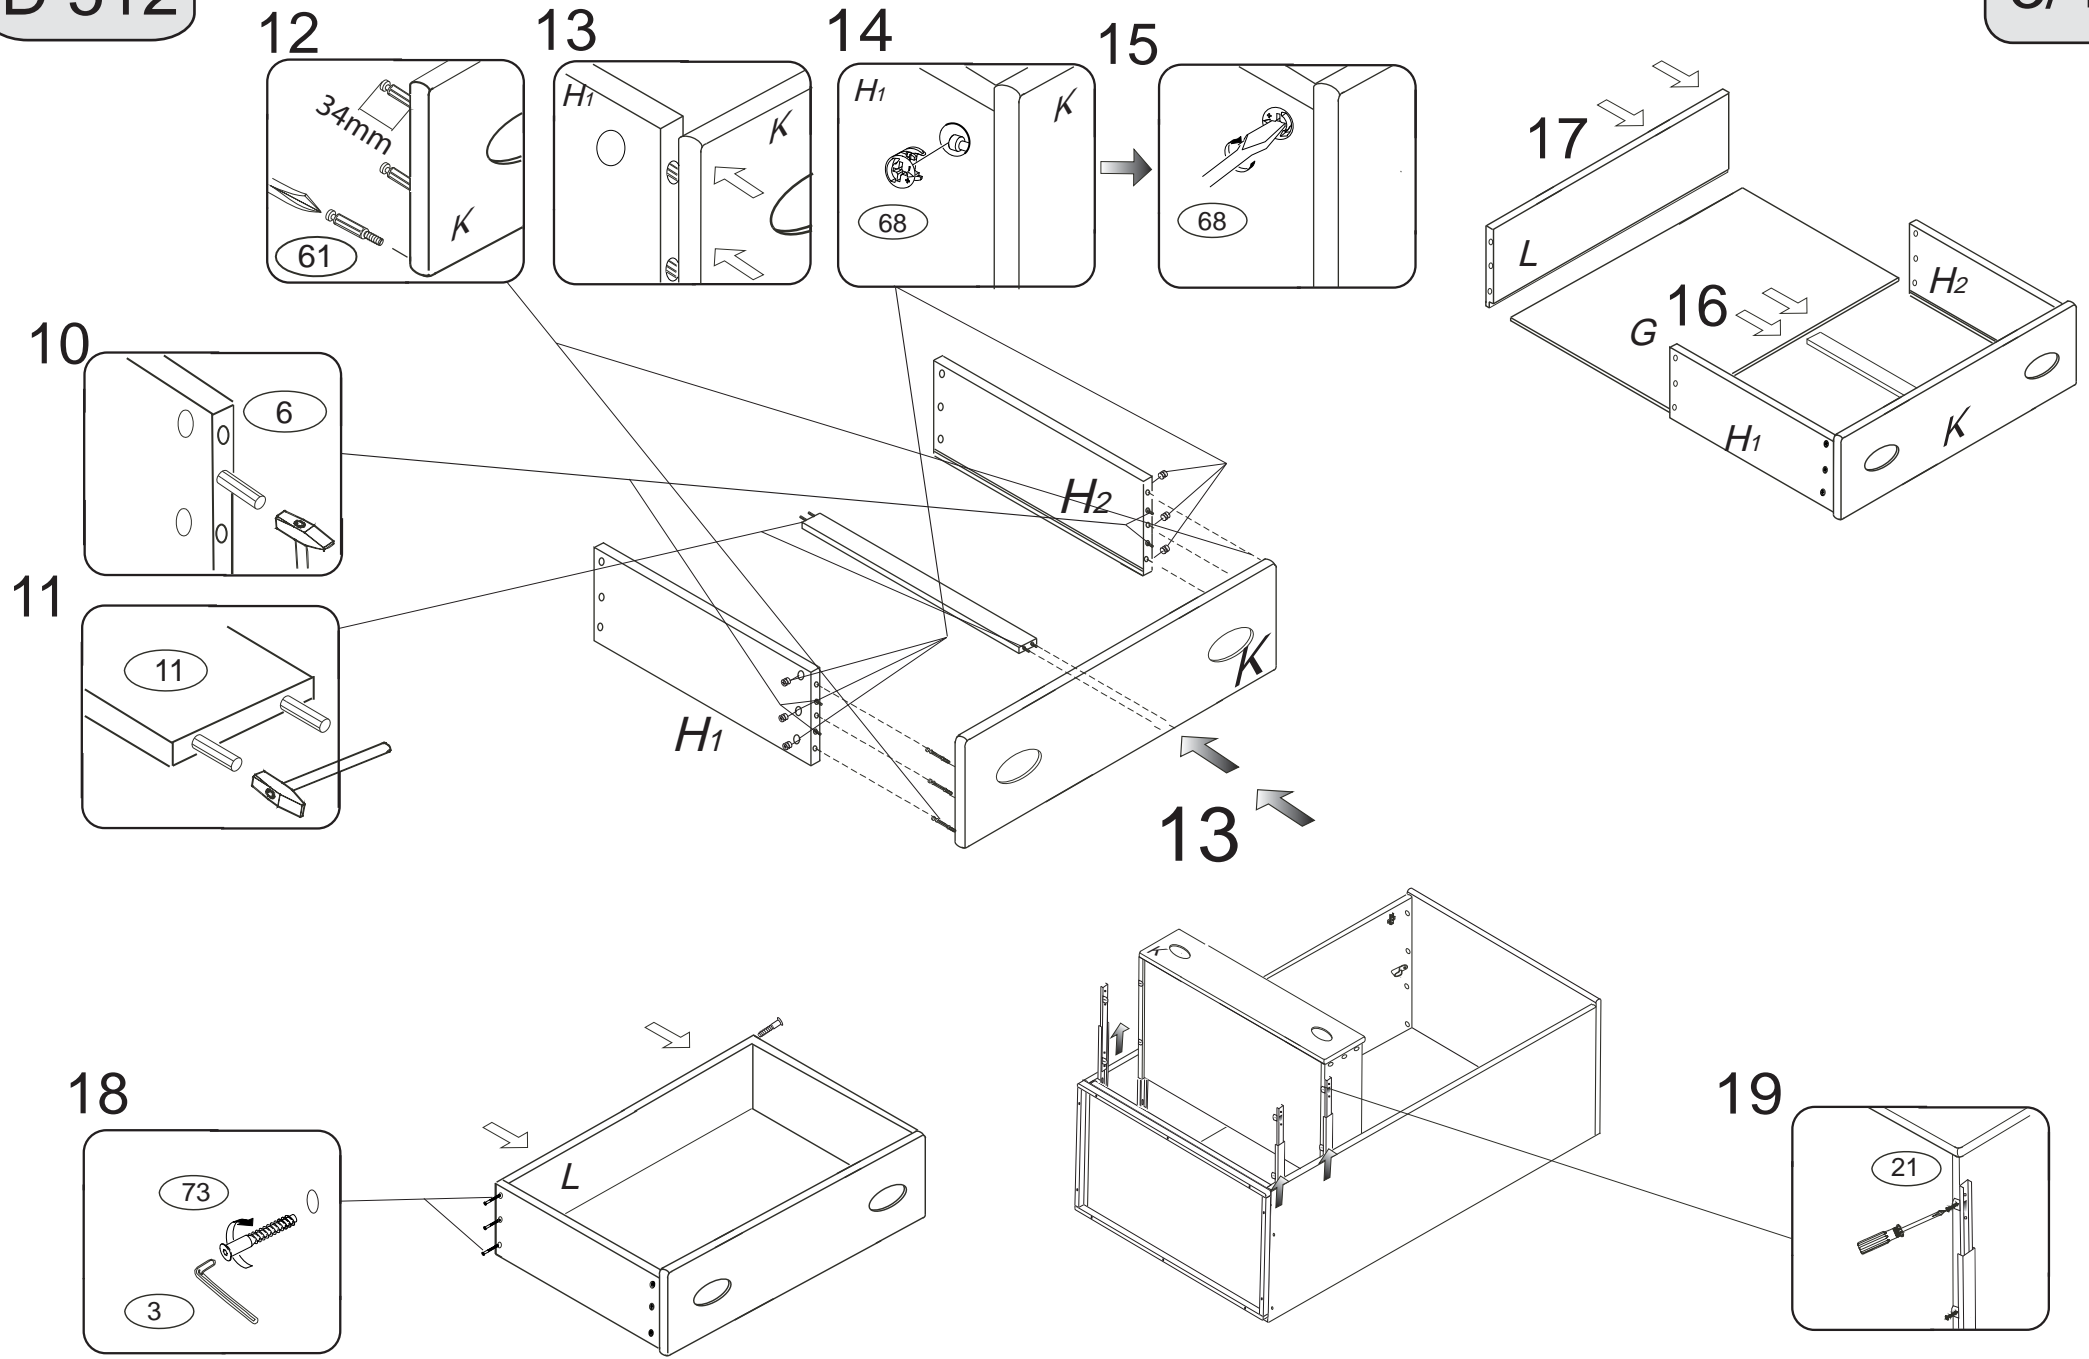


22

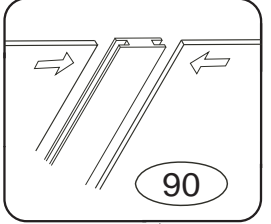


23

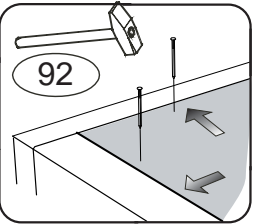


24

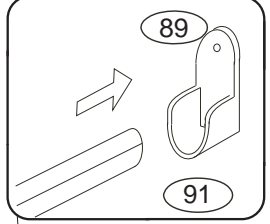



25

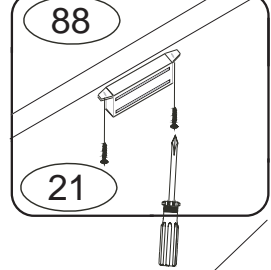



20

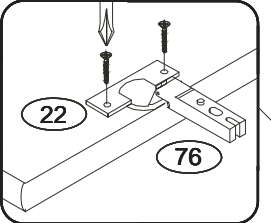

21

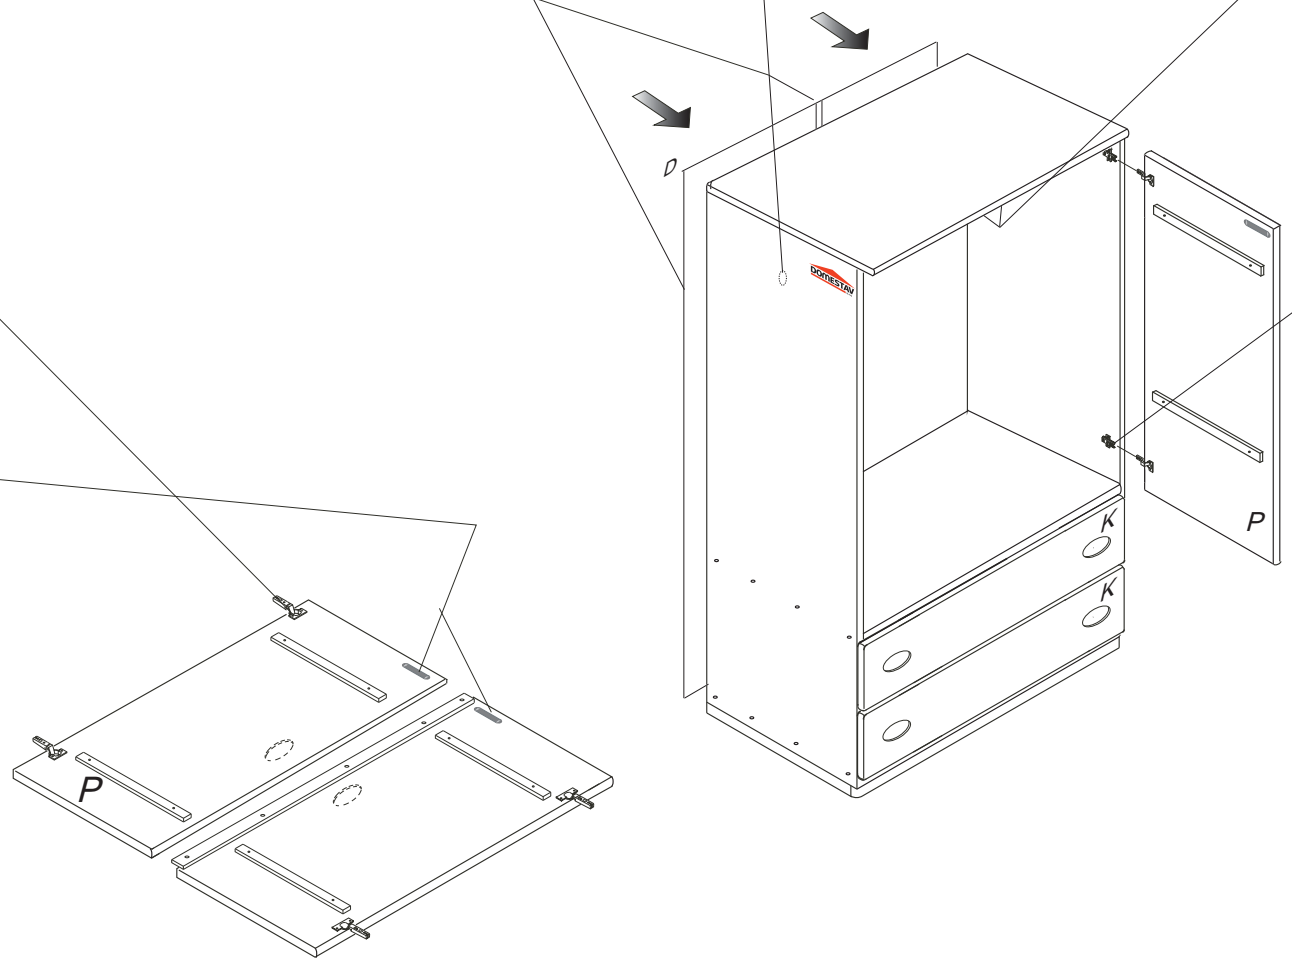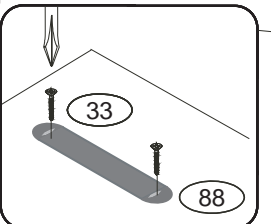

26

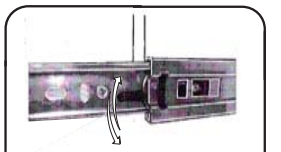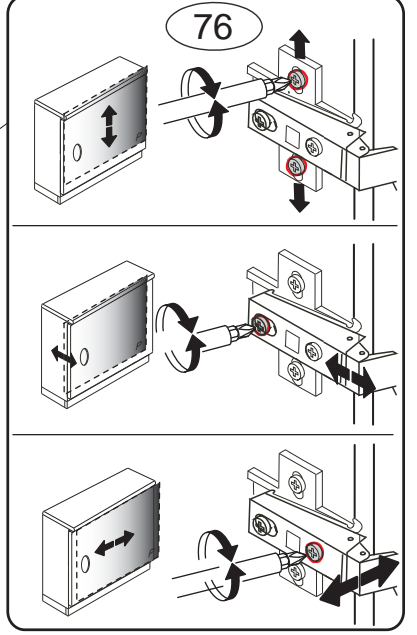

27 Před vyjmutím zásuvky nazdvihněte jazýček