


DOMINO

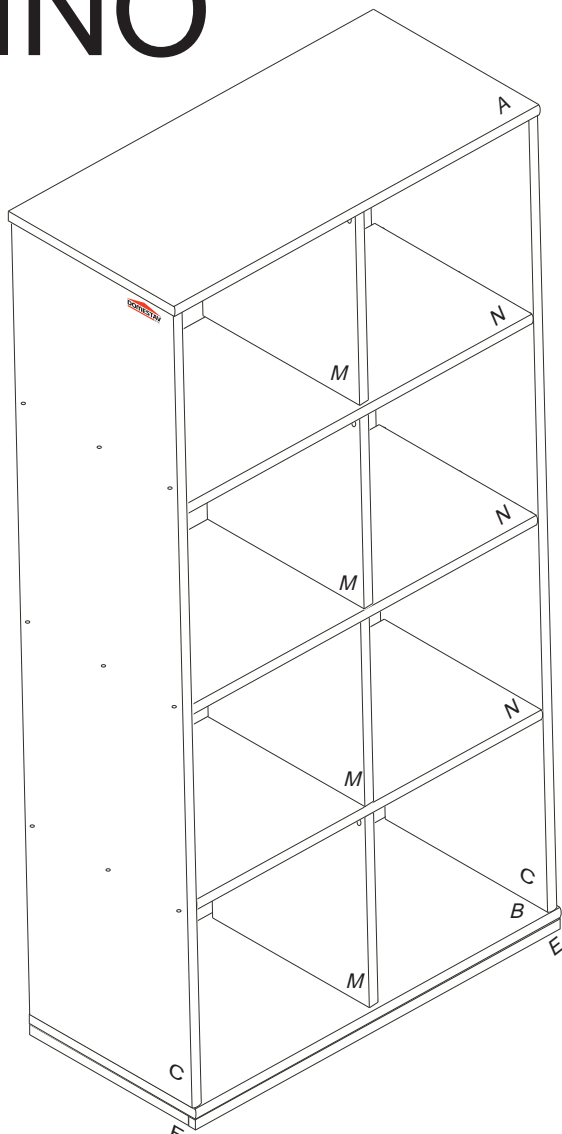










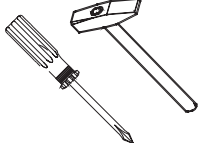


D620


664x402x1384



Kolíky vždy narazte nejprve do otvorů ve hranách dílců, je nutné je zarazit se stejným přesahem. V případě, že některý kolík přesahuje, je nutné jej zakrátit. Dílce srážejte kladivem pouze přes dřevěnou podložku.

1/3


	 4 x1 4mm	 6 x26 8x35mm	 7 x9 8x60mm	 22 x10 3,5x40mm	 23 x41 3,5x16mm	 28 x2 5x60mm
 60 x14 15mm	 61 x14 DU 2	 67 x14	 71 x26 7x50mm	 87 x18	 109 x2	 111 x2 10x50mm

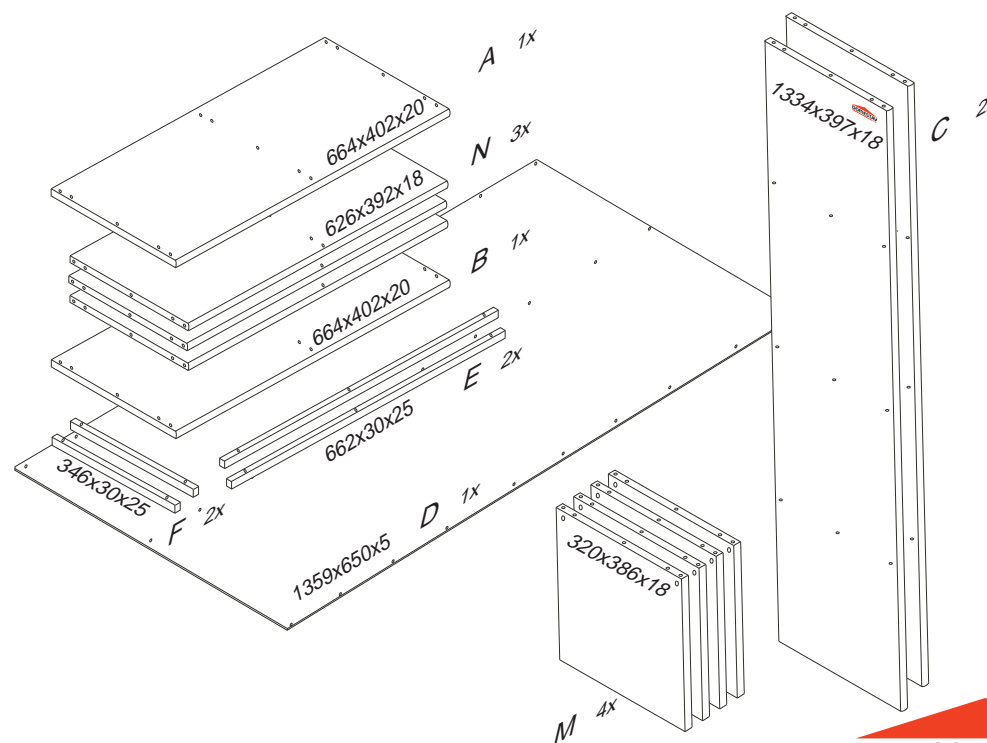


D 620

2/3


1

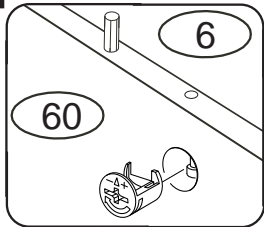


2

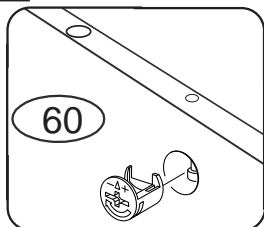


3

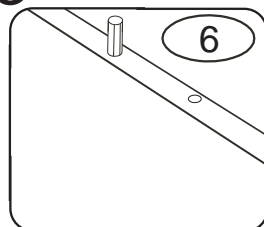






3

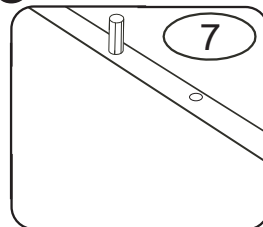


4

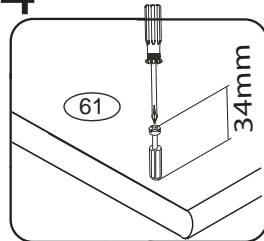


5

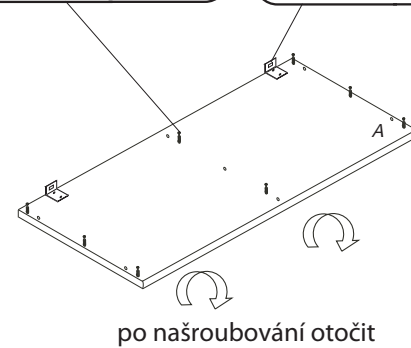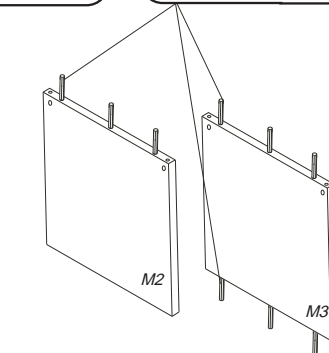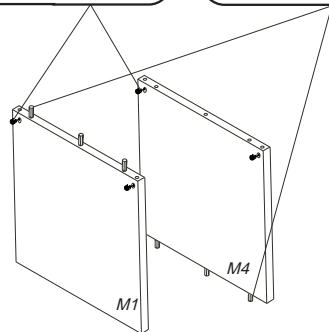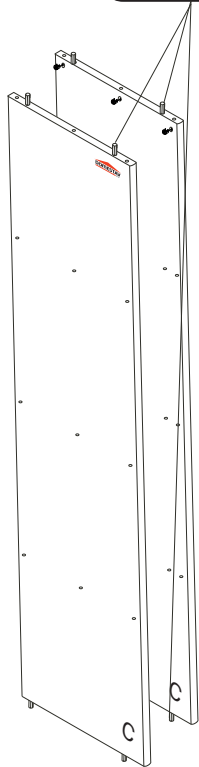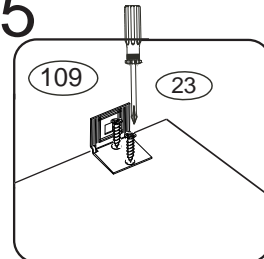


7

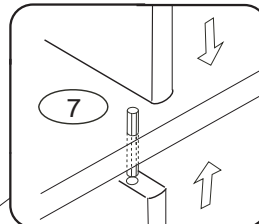




8

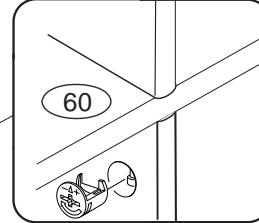

9

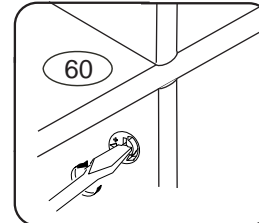


6

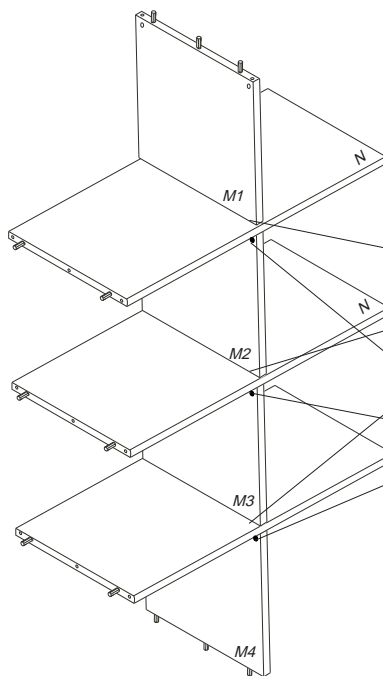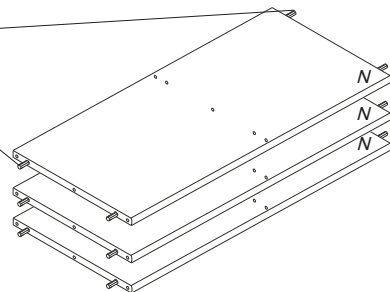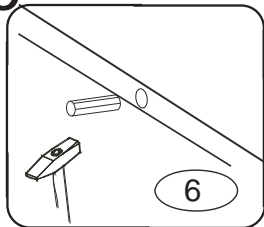


D 620


12

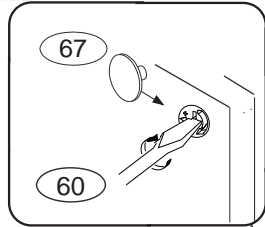


13

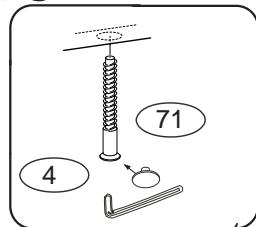



14

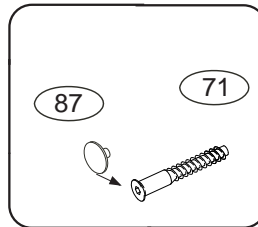


15

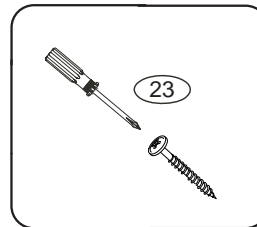


3/3

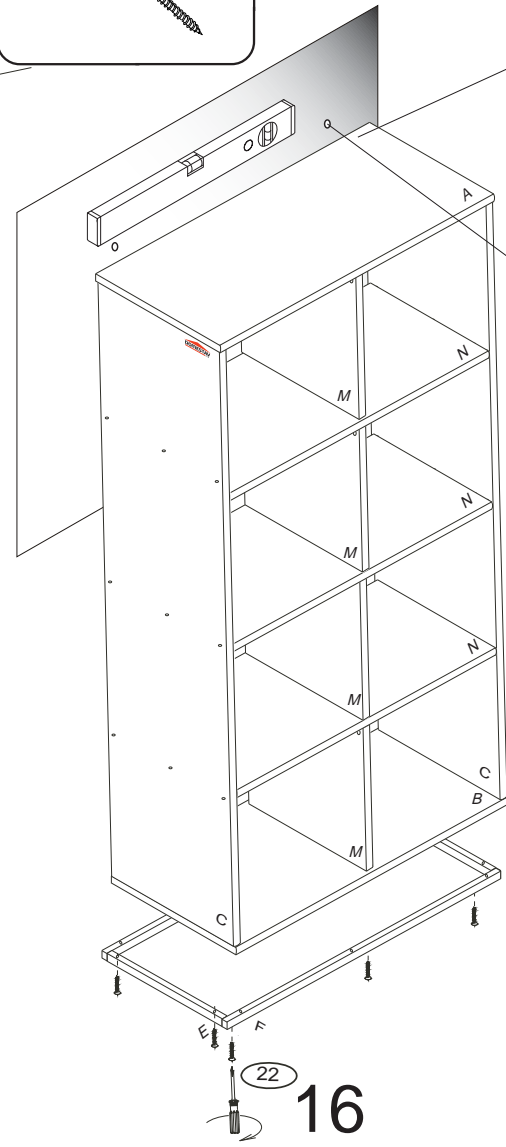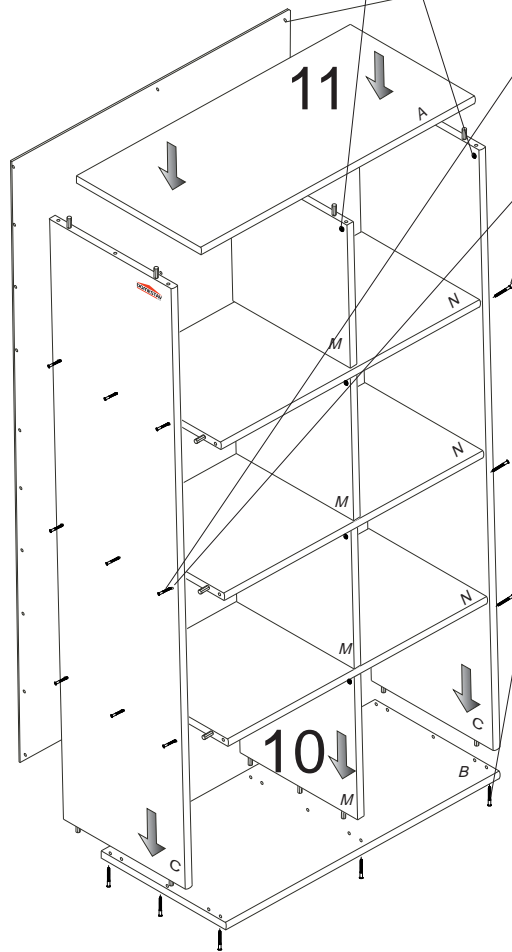


17

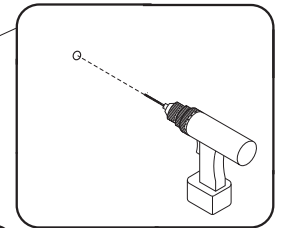

18

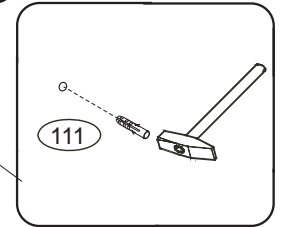

19

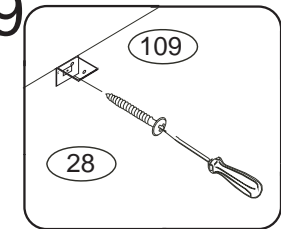

16

22